


LiftMaster

WIRELESS KEYLESS ENTRY • MODEL 877LM


For use with Security+[®]2.0 Garage Door Openers. All Security+[®]2.0 Garage Door Openers have a yellow Learn button and two yellow antennas. Refer to your product owner's manual for additional programming instructions if necessary. The product will activate when the 4-digit Personal Identification Number (PIN) and ENTER button are pressed on the Keyless Entry.

Install the battery and program the Keyless Entry prior to installation. Make sure the garage door opener has a working light bulb because it is a programming indicator.


PROGRAM INITIAL PIN - using the Learn button

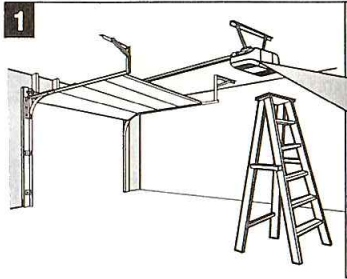


1 Locate the Learn button on the garage door opener.

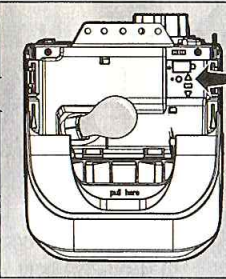



2 Press and release the Learn button. The LED will light. Within 30 seconds...



3 Enter a 4-digit personal identification number (PIN) of your choice:

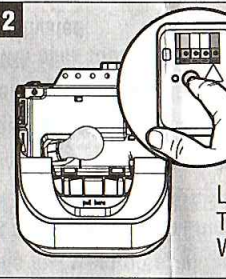


4 Press and hold the ENTER button until... ..the light bulb blinks.

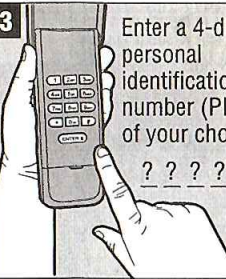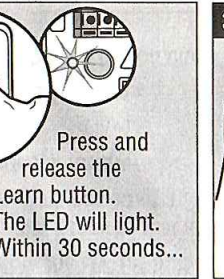


PROGRAM INITIAL PIN - using a multi-function door control*

1 Press the LEARN button on the door control to enter Programming Mode.

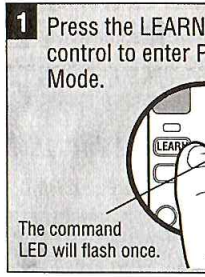


The command LED will flash once.

2 Press the LEARN button again, the LED will flash once.


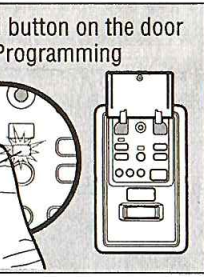


The command LED will flash once again.

3 Enter a 4-digit personal identification number (PIN) of your choice:




4 Press and hold the ENTER button until... ..the light bulb blinks.

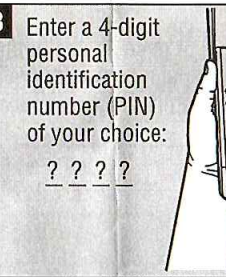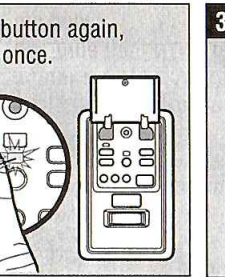



To test, press the PIN, then press the ENTER button. The garage door opener will activate. To program the Keyless Entry to more than one garage door opener, repeat the steps above using a new PIN for each additional garage door opener.

CHANGE AN EXISTING PIN

1 Press the programmed PIN that you want to change.




2 Press and hold the # button until... ..the light bulb blinks twice.

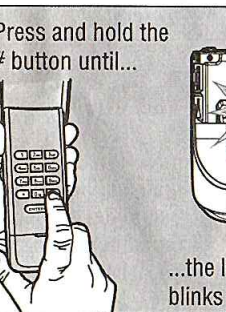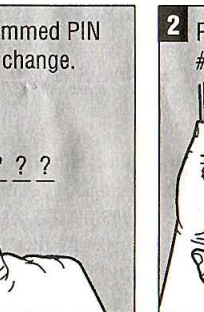


3 Enter the new 4-digit PIN of your choice, then press the ENTER button.

 +


new PIN

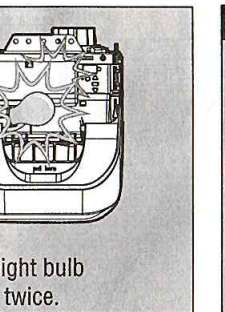

The light bulb will blink once.

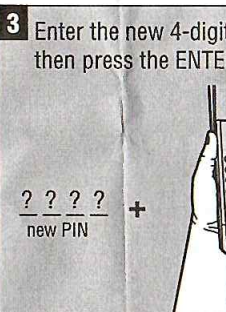

4 To test, press the new PIN, then the ENTER button. The garage door opener will activate.

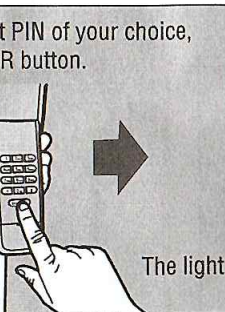


*Optional accessory

PROGRAM A TEMPORARY PIN

A temporary 4-digit PIN can be programmed to allow access to visitors. Each programmed PIN can program one temporary PIN. The temporary PIN can be set for a number of hours or a number of door openings. The temporary PIN cannot be the same as any previously programmed PIN.

1 Press any programmed PIN, then press and hold the * button until...


? ? ? ?
PIN +

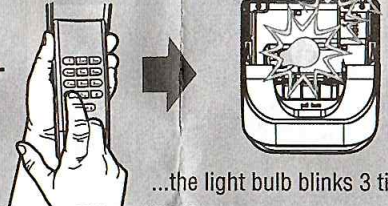

...the light bulb blinks 3 times.

2 Enter the temporary 4-digit PIN of your choice, then press the ENTER button.


? ? ? ?
Temporary PIN +

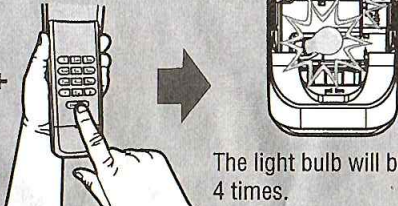

The light bulb will blink 4 times.

3 **NUMBER OF HOURS**


Press the number of hours the temporary PIN will work (up to 255). + Then press the * button.

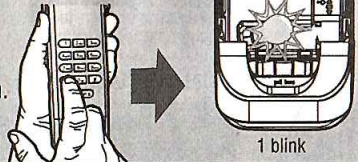

1 blink

3 **NUMBER OF OPENINGS**

Press the number of openings the temporary PIN will work (up to 255). + Then press the # button.

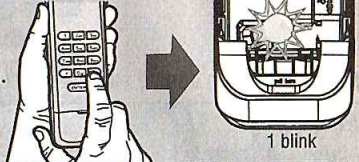


1 blink

To test, press the temporary PIN, then press the ENTER button. The garage door opener will activate. If the temporary PIN was set for a number of openings, the test will use up one opening.

To clear the temporary PIN, repeat steps 1-3 above, setting the number of hours or openings to 0 in step 3.

INSTALLATION

- Select a location to mount the Keyless Entry at a minimum height of 5 feet (1.5 m) out of the reach of children.
- Remove battery cover and battery.
- Mark the top mounting hole and drill 1/8 inch (3.2 mm) pilot hole.
- Install the top screw, allowing 1/8 inch (3.2 mm) to protrude above the surface. Position the Keyless Entry over the top screw.
- Mark the bottom hole and drill 1/8 inch (3.2 mm) pilot hole. Install the bottom screw. Do not overtighten to avoid cracking the plastic housing.
- Reinstall battery and replace cover.

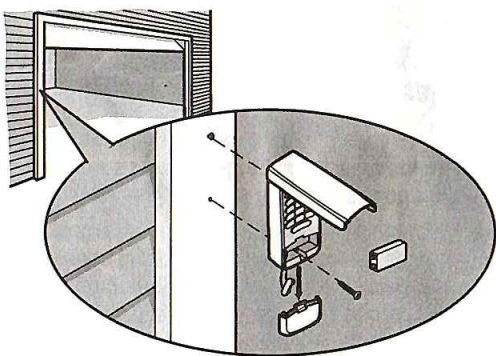

OPERATION

The garage door opener activates when the PIN and ENTER button are pressed. The keypad will blink for 15 seconds, during that time the ENTER button can be used to stop, start or reverse the door.

If the wrong number is accidentally pressed, press the correct PIN then the ENTER button. The Keyless Entry will transmit only the last four digits that were pressed before the ENTER button.

ONE BUTTON CLOSE: The Keyless Entry has a feature that allows the door to be closed using the ENTER button instead of a PIN.

NOTE: This feature is not available on external receivers.

To deactivate the one button close feature:

- Press and hold the 1 and 9 buttons for 10 seconds.
- The keypad will blink four times when the one button close feature is deactivated.

To activate the one button close feature:

- Press and hold the 1 and 9 buttons for 10 seconds.
- The keypad will blink twice when the one button close feature is activated.

REPLACEMENT PARTS

Keypad cover	41D621-1
Battery	10A25
Battery cover	41D541

BATTERY


⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

Replace the battery when the keypad becomes dim or does not light after a button is pressed.

Dispose of old battery properly.

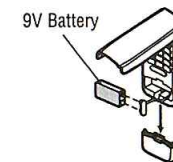

NOTICE: To comply with FCC and/or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY

ONE YEAR LIMITED WARRANTY

The Chamberlain Group, Inc. warrants to the first consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.