


3-BUTTON REMOTE CONTROLS UNIVERSAL

893MAX
953EV, 953EV-P2,
953EVC, 953EVC-P2

CMXZDCG453 AND 139.30498

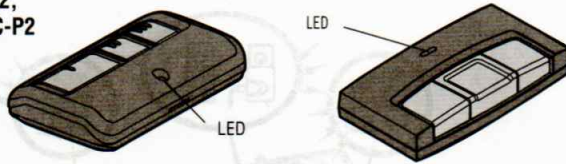

Attention: LiftMaster, Chamberlain, Do-It, Master Mechanic, Raynor, True Value are compatible with Sears Craftsman technology.

PREPARE

Locate the Learn button on the garage door opener.
NOTE: Your garage door opener may look different.

Locate the Program button on the remote control.

PROGRAMMING THE REMOTE CONTROL

1 Press the program button of the remote control until the LED on the front of the remote control turns on.

2 Press and release the remote control button you wish to use the number of times...that corresponds with the garage door opener type:

# of Presses	Garage Door Opener Type
...1time	Security+ 2.0™ (Yellow Learn Button)
...2times	315 MHz Security+® (Purple Learn Button)
...3times	390 MHz Security+® (Red/Orange Learn Button)
...4times	390 MHz Billion Code (Green Learn Button)

For example: if your garage door opener has a yellow learn button, you just press and release any remote button you wish to use...1time.
If your garage door opener has a purple learn button, you just press and release any remote button you wish to use...2 times.

3 To exit programming mode, press any remote control button **except** the button that was just programmed.

4 Press and release the Learn button on the garage door opener.

The Learn LED will light.
Within 30 seconds...

5 Press the remote control button programmed in step 2 until the garage door opener lights flash or two clicks are heard.

6 To test, press the programmed button on the remote control...

The garage door opener will activate.

7 Install the visor clip

Attention: To program the remote to more than one garage door opener, repeat the steps above using another button and reprogram with each additional garage door opener.

To erase all codes of unwanted remote, press and hold the learn button on garage door opener until the learn LED light goes out (approximately 6 seconds). all previous codes are now erased.